


# KALE S 180

WHITE

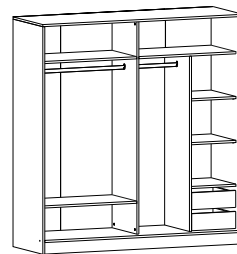


190+210




Dear Customer,

We design and produce our products for people to love and have fun with them as we do.

The product you bought was subjected to all sorts of tests and control before sending out to you.

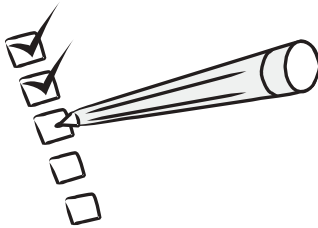


Before start assembling, please check the whole components and accessories according to the lists. If you bought more than one product, to prevent confusion be sure that you completed the first product. Then start the other product's assembling.

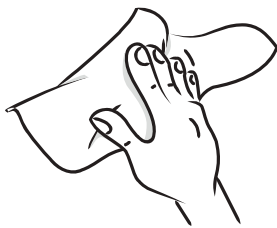

Before start assembling, please clean all the components with a damp cloth. Also for usual cleaning, this will be enough.



Although all the products are produced and packed carefully, sometimes happen that some component is damaged during the transportation. In such a case please check the missing or damaged part and do not hesitate to contact us. You can send e-mail to [info@hobby.com](mailto:info@hobby.com) or reach us at [+353212345678](tel:+353212345678)






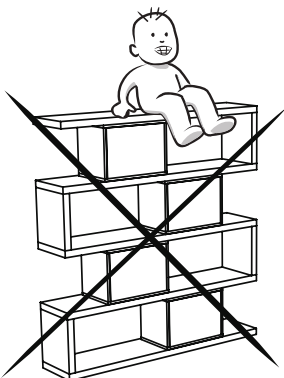


Do not use your furniture for out of purposes. If you would like to use it, please contact us for further questions.

Do not directly contact your furniture with excessive heat, cold and humidity because the product can be affected..




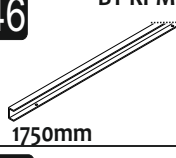
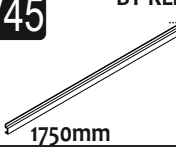








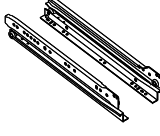


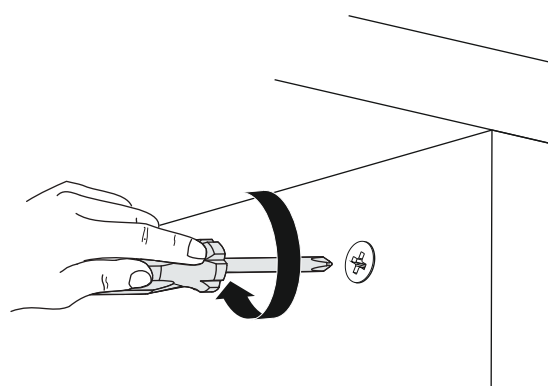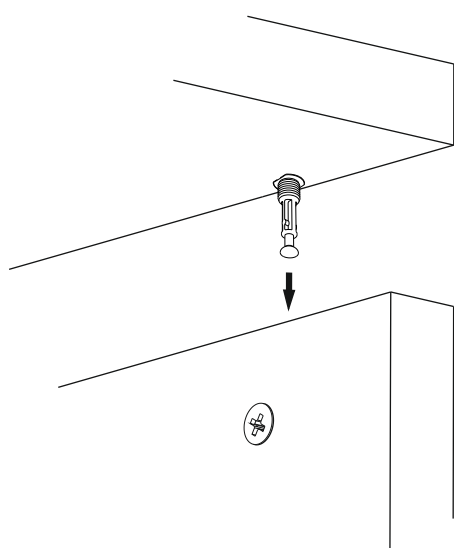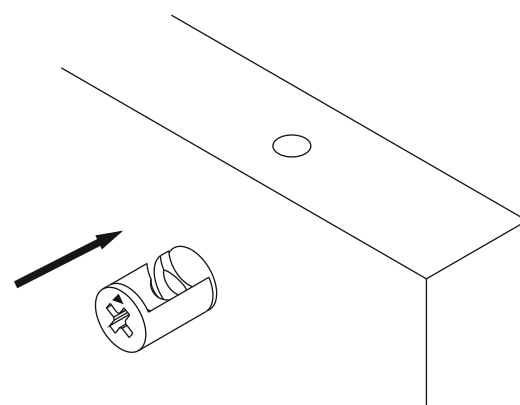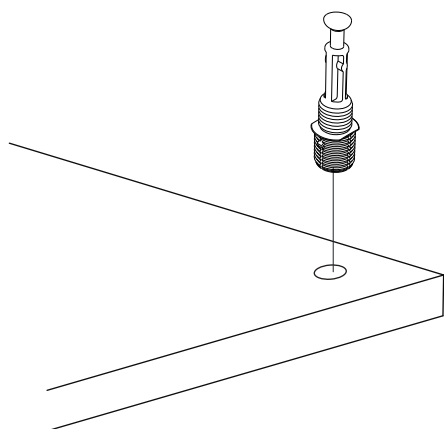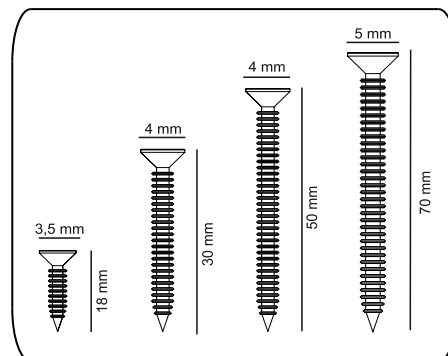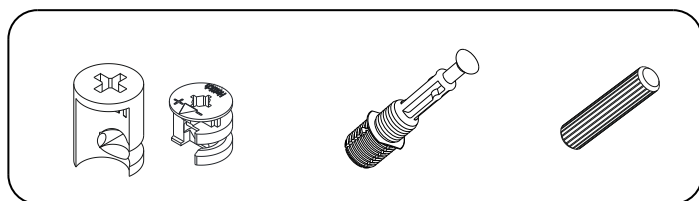


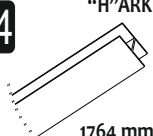
# ATTENTION !!

Minifix is the main connection material used in products. Before starting assembly, please check the drawings below.


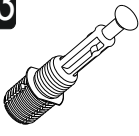


# ACCESSORY LIST

KALE GVD 190 CM  
SRG WHITE
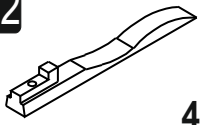
<b>A23</b> Minifix M8  46x	<b>A22</b> Minifix G18  100x	<b>A04</b> KVLY  58x	<b>V46</b> BY KPM SYH  1750mm 2x	<b>V45</b> BY KLP SYH  1750mm 2x
<b>A24</b> FLNS  4x	<b>A55</b> AB  865 mm 1x	<b>A18</b> 3,5x18  88x	<b>A93</b> 2x 	<b>A65</b> RP  8x
<b>A06</b> 18 mm BYZ  36x	<b>A14</b> UM  84 mm (MESAN) 26x	<b>A17</b> 4x50  8x	<b>R04</b> CRY  40 cm 2x	<b>V28</b> 3.5X25 PU.VD  10x
<b>V44</b> SAL/R-904 6X2  6x	<b>V42</b>  4x	<b>A18</b> 3,5x18  4x	<b>A55</b> AB  446 mm 1x	<b>A64</b> "H"ARKLK CTS  1764 mm 1x


## GENERAL VIEW

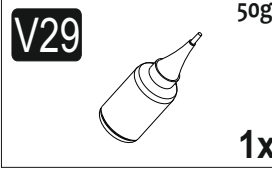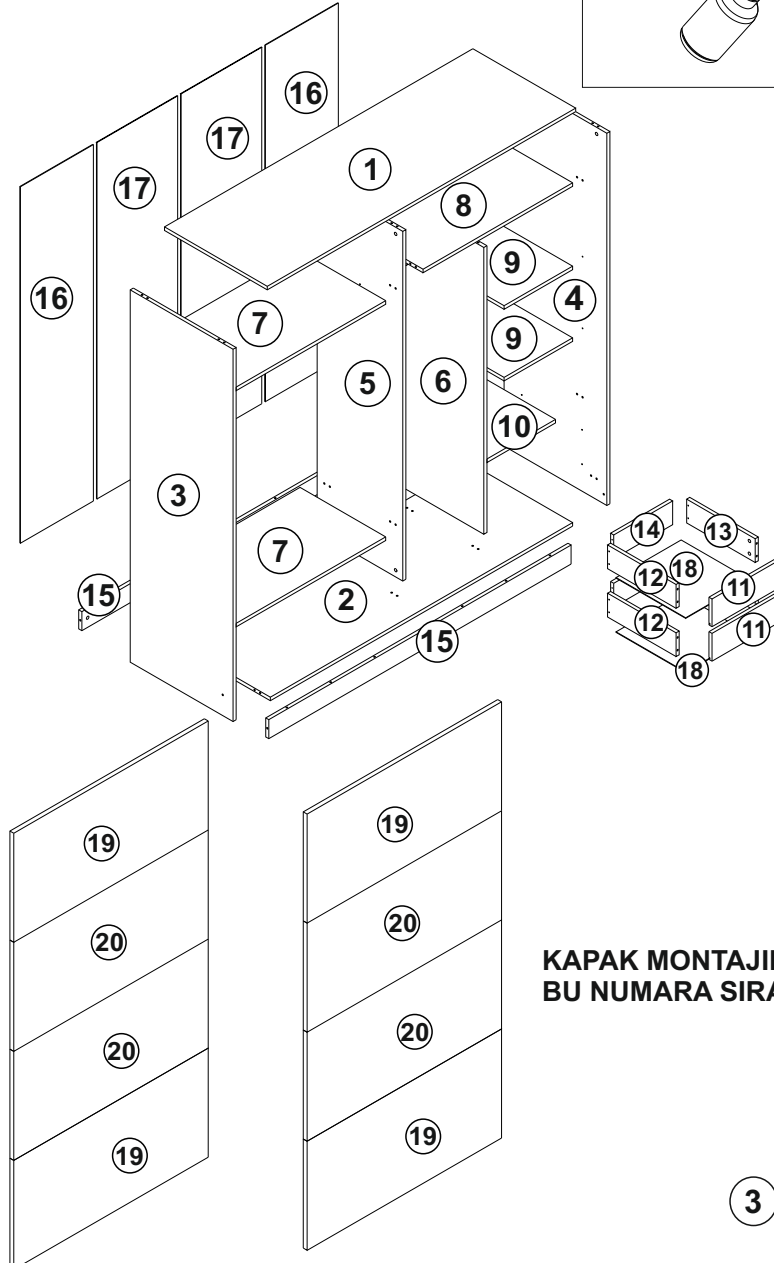


		190'LUK					210'LUK		
1	1	1800	600	18	1	1	1800	600	18
2	1	1764	600	18	2	1	1764	600	18
3	1	1880	600	18	3	1	2080	600	18
4	1	1880	600	18	4	1	2080	600	18
5	1	1766	500	18	5	1	1966	500	18
6	1	1448	500	18	6	1	1598	500	18
7	2	873	500	18	7	2	873	500	18
8	1	873	500	18	8	1	873	500	18
9	2	400	500	18	9	2	400	500	18
10	1	400	500	18	10	1	400	500	18
11	2	396	140	18	11	2	396	140	18
12	2	400	120	18	12	2	400	120	18
13	2	400	120	18	13	2	400	120	18
14	2	339	120	18	14	2	339	120	18
15	2	1764	96	18	15	2	1764	96	18
16	2	1800	426	3	16	2	1997	426	3
17	2	1800	471	3	17	2	1997	471	3
18	2	406	375	3	18	2	406	375	3

KAPAK MONTAJINI  
BU NUMARA SIRASI İLE TOPLAYINIZ!!!!


# 1

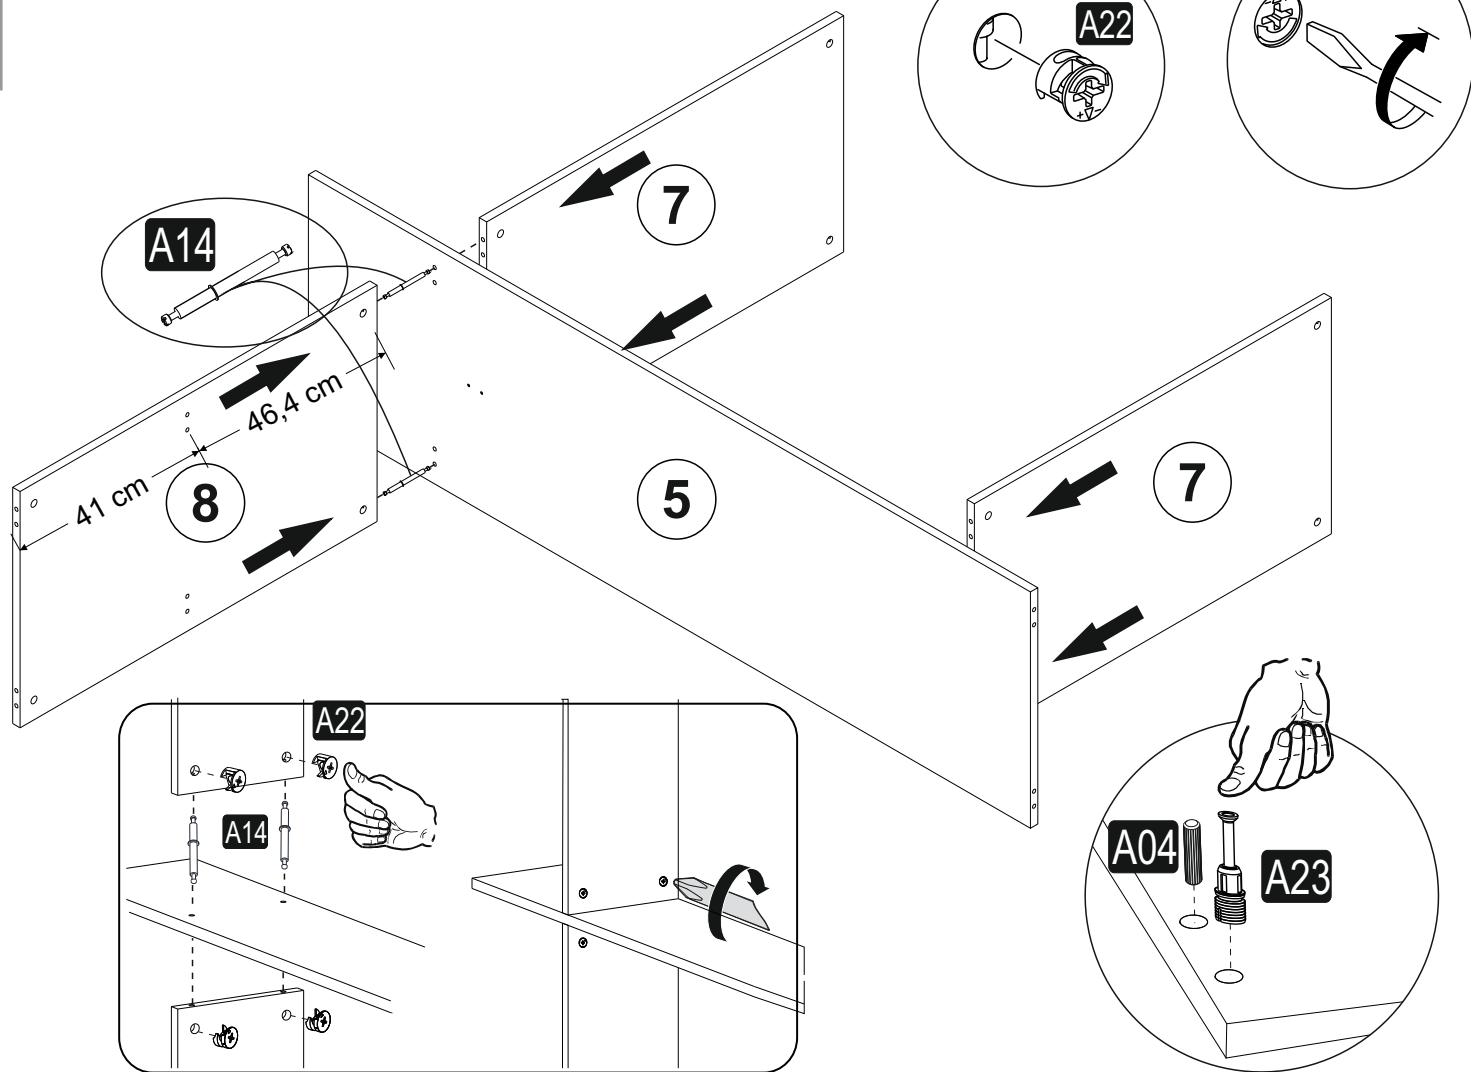


# 2

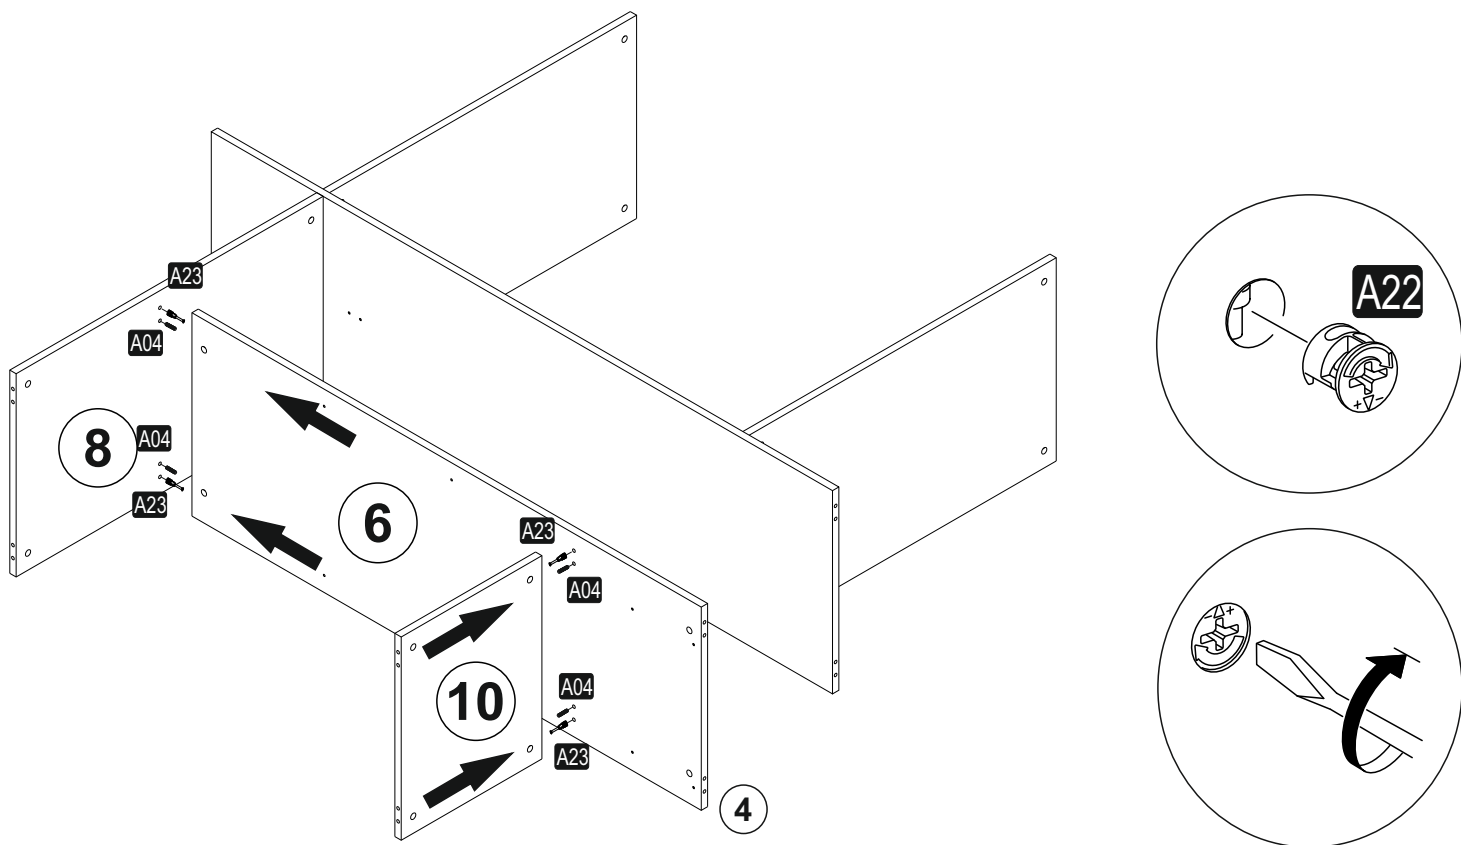






# 3

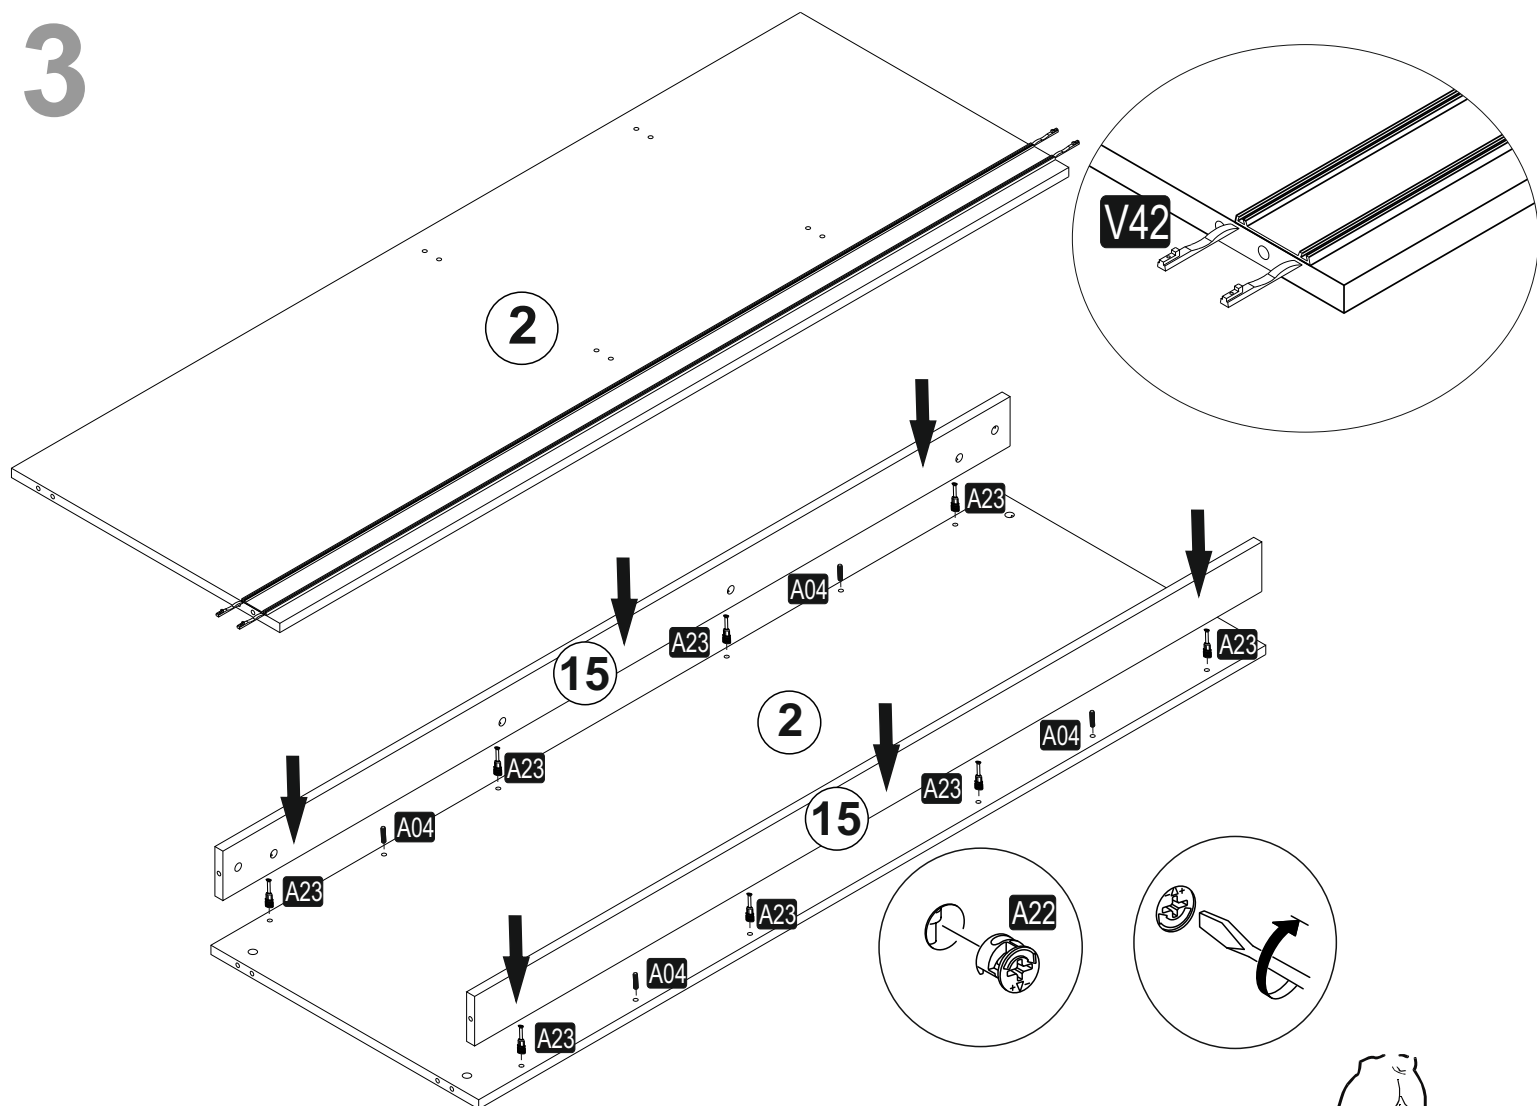




# 4

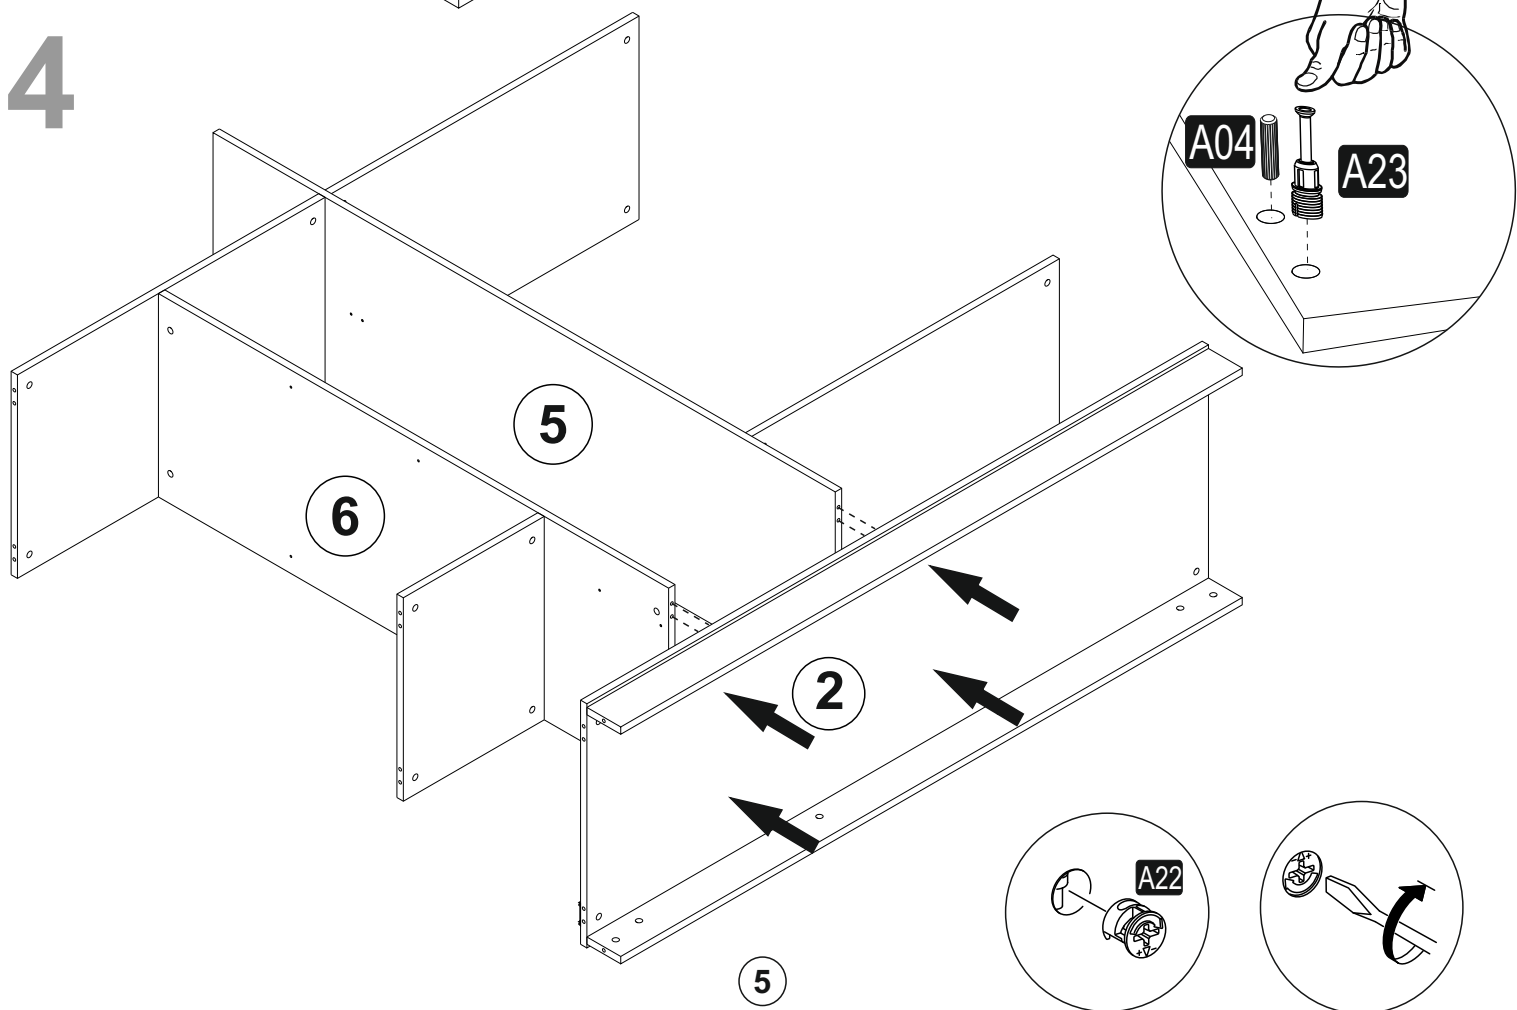


5

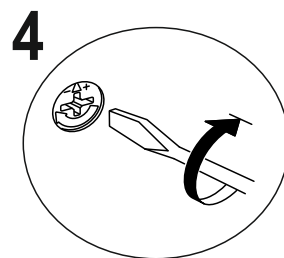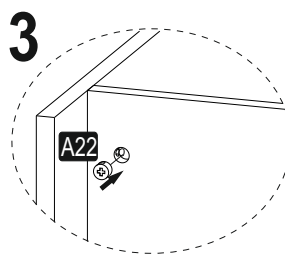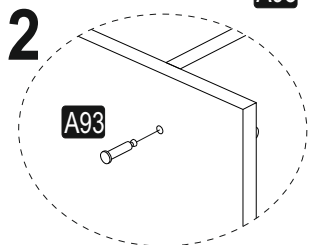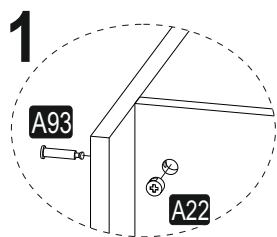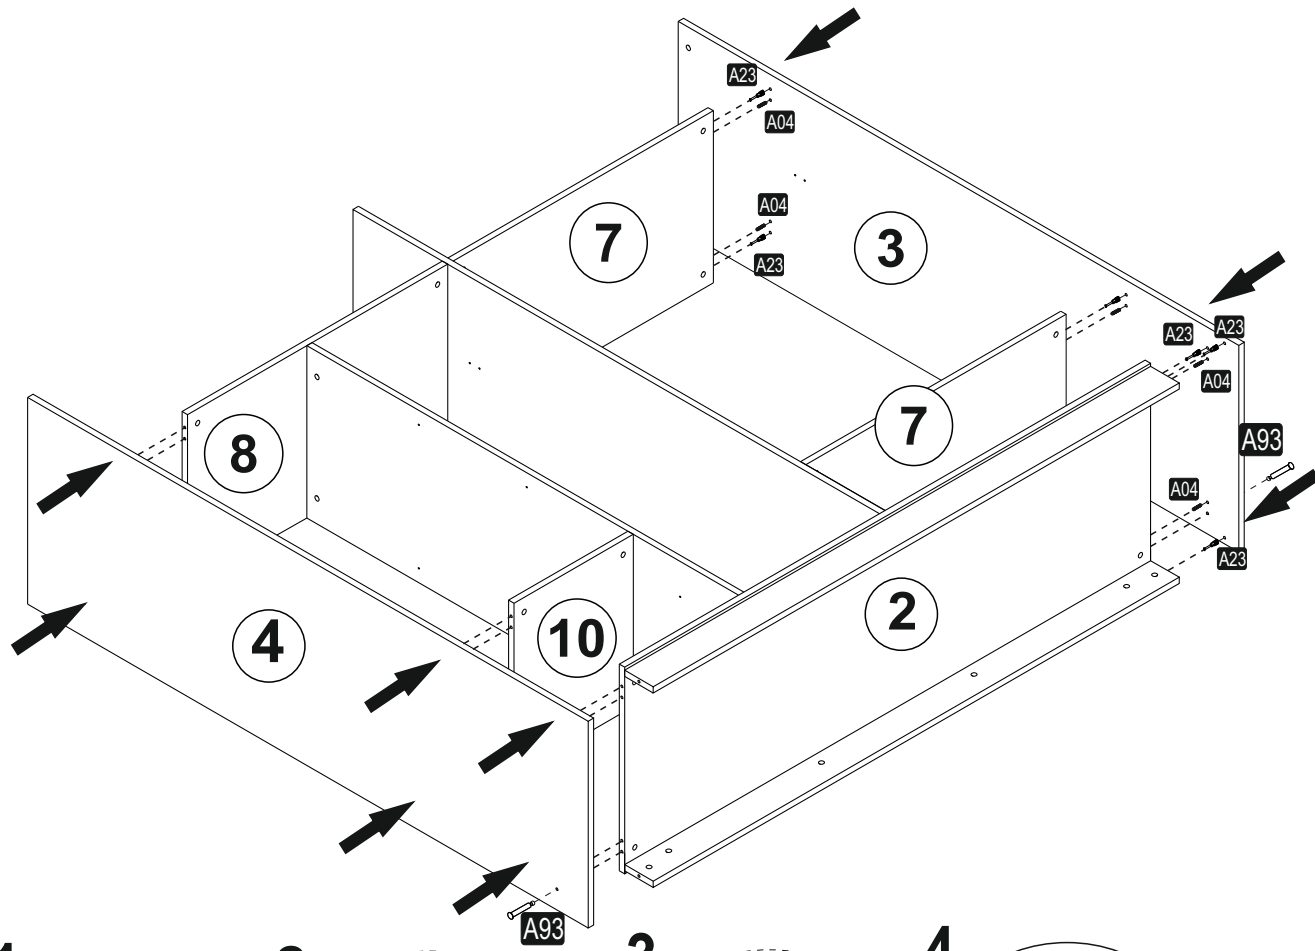





6

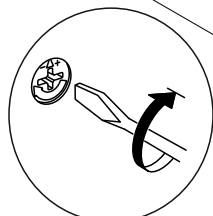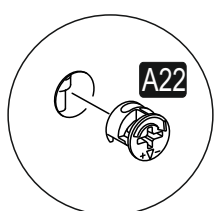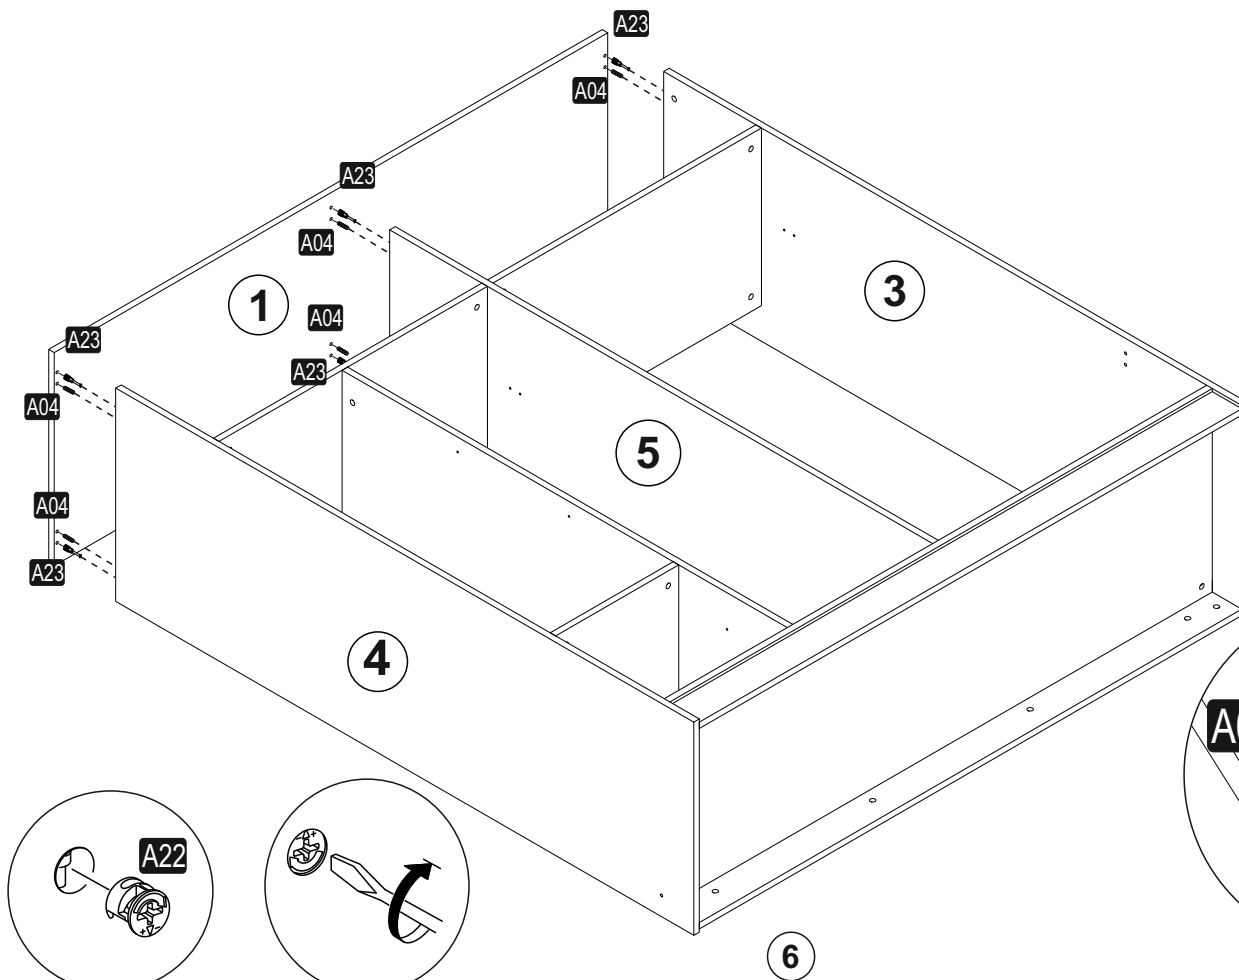

7

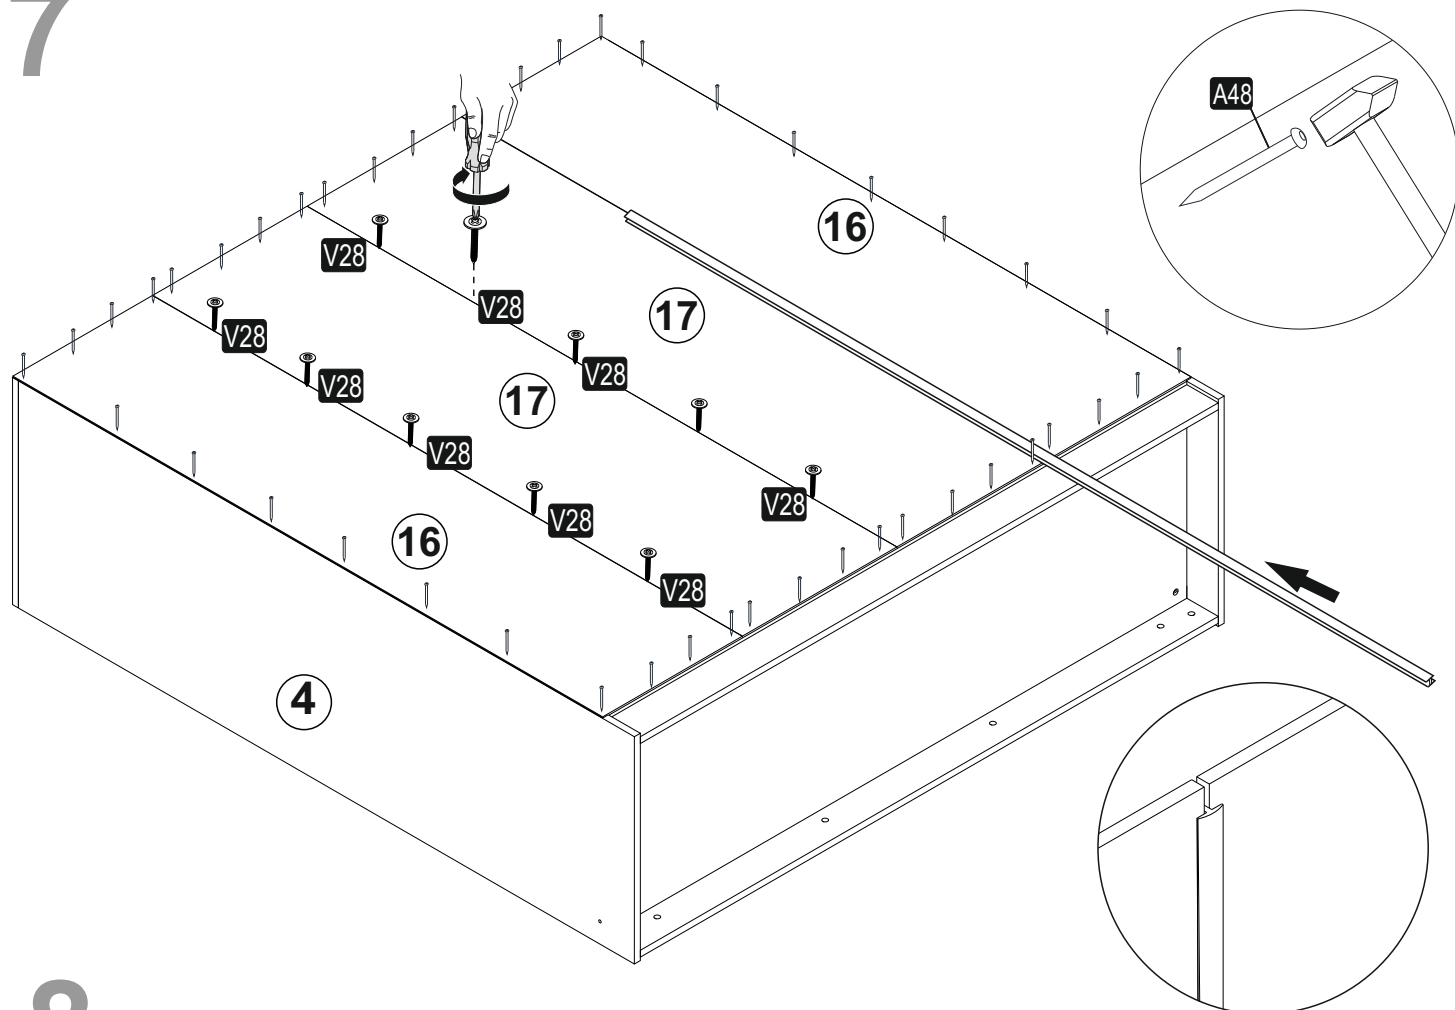




8

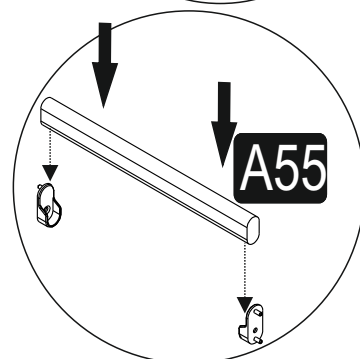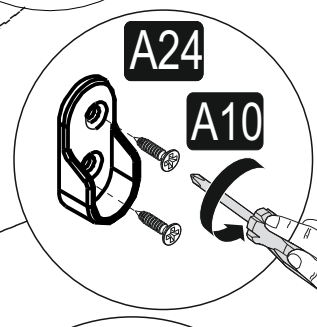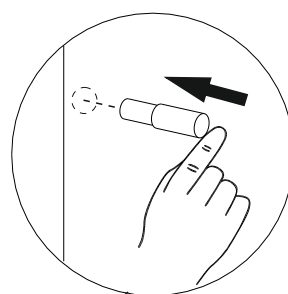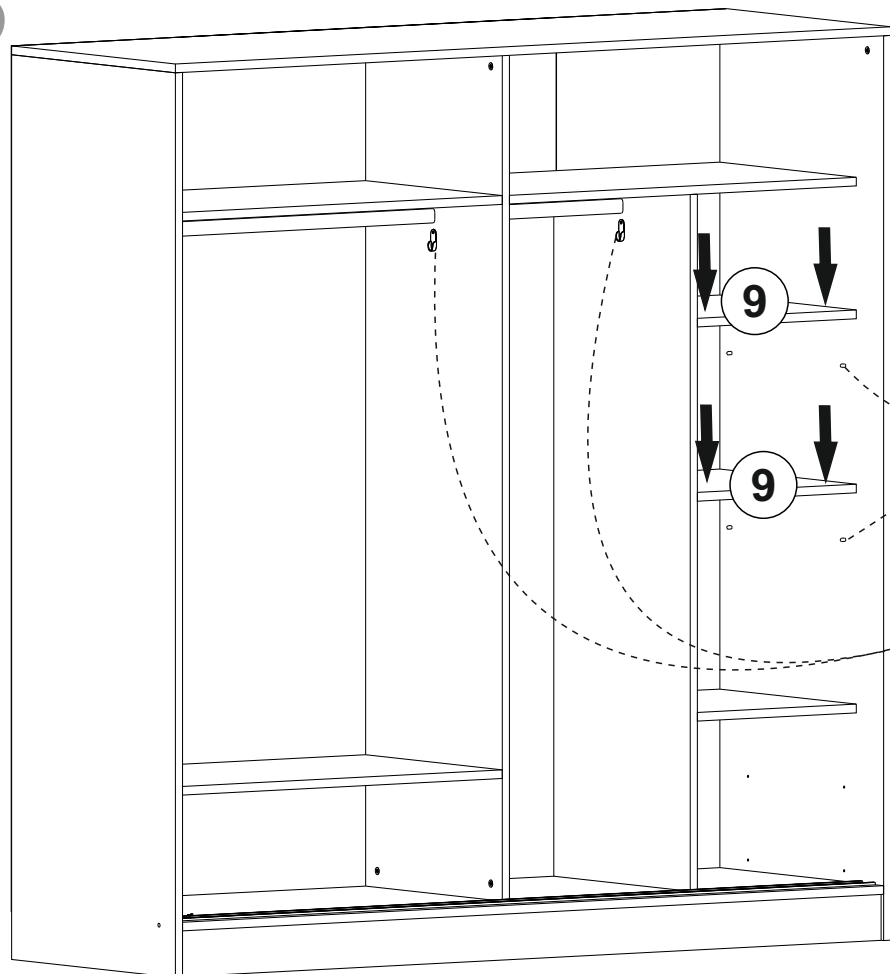



7



9

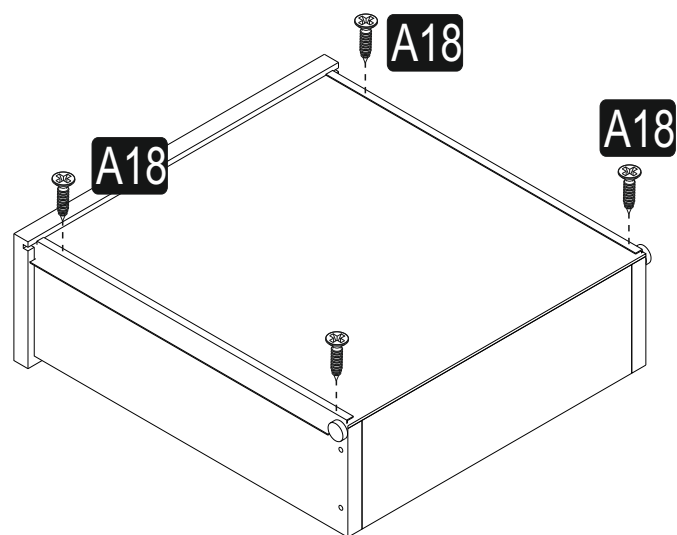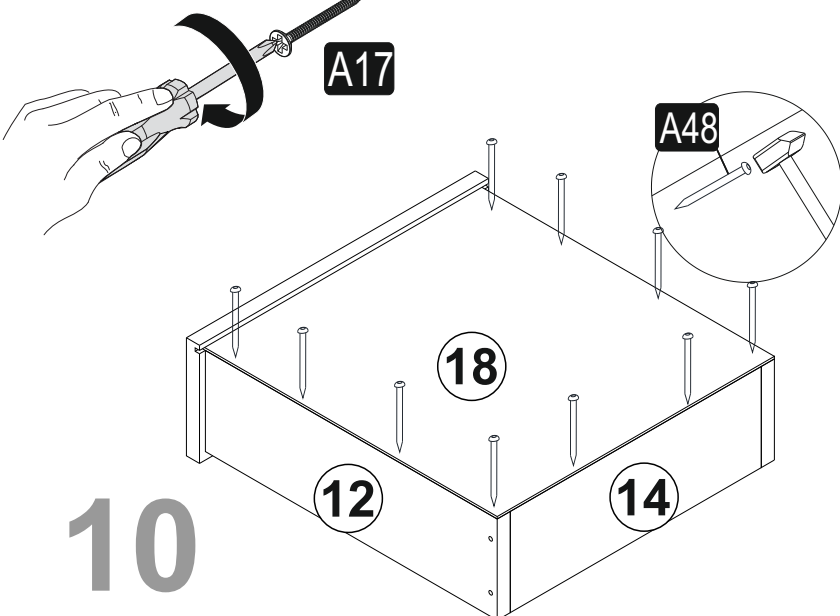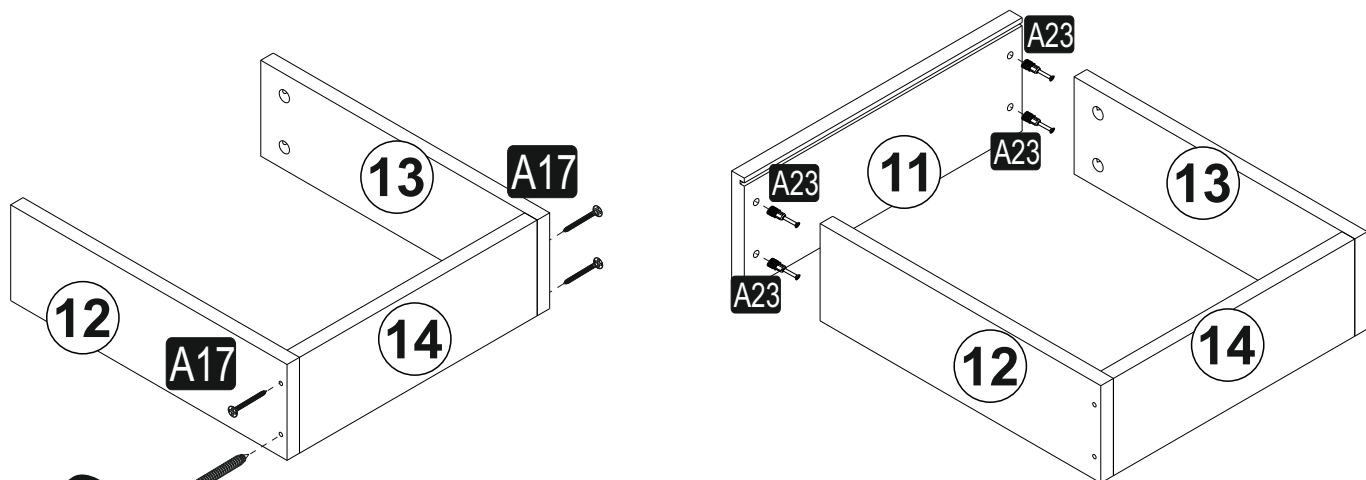


10

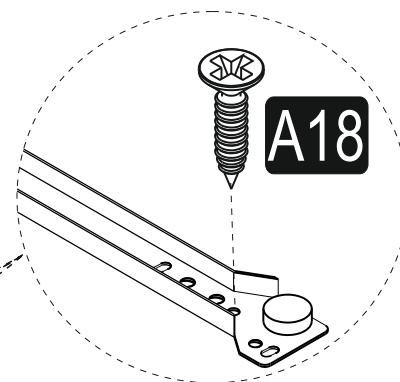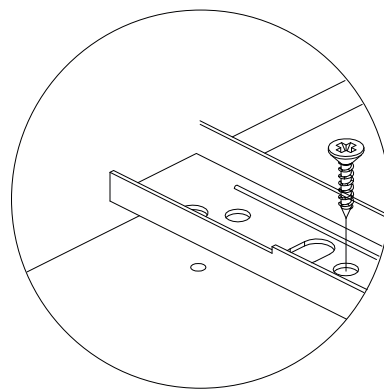


8

11




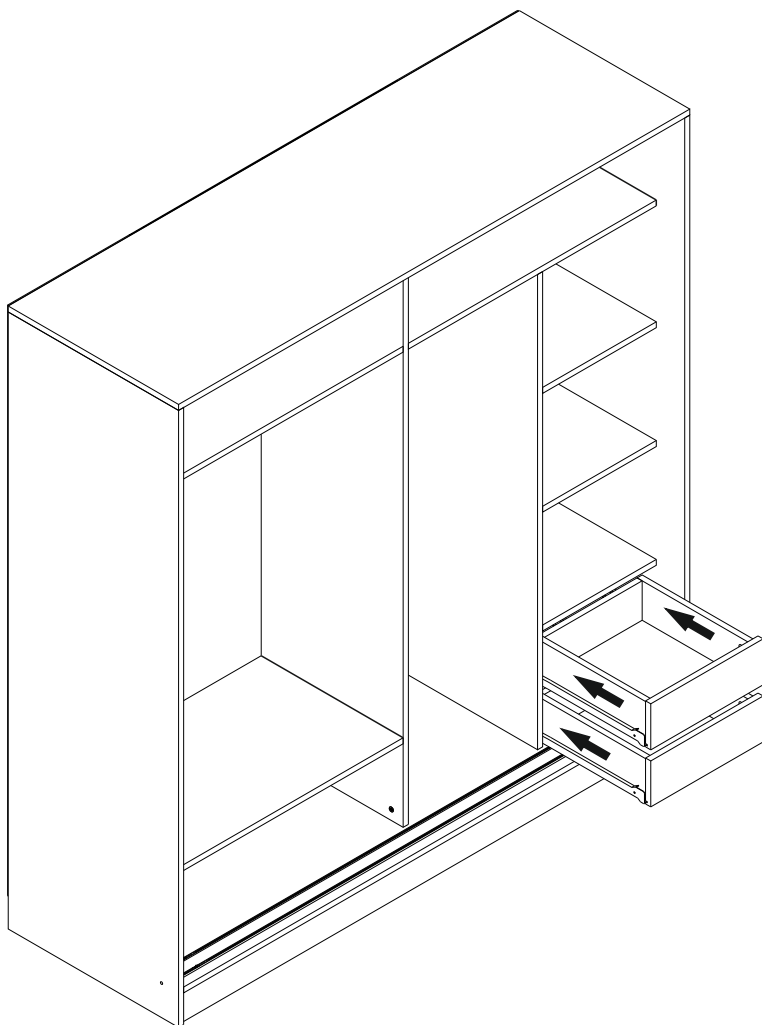


12

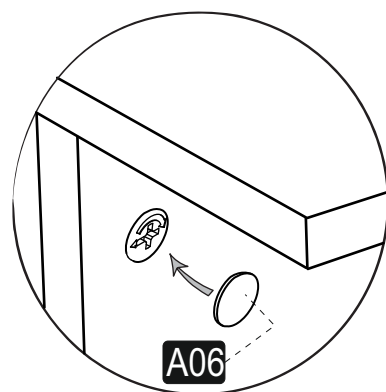



# 13

## 4x

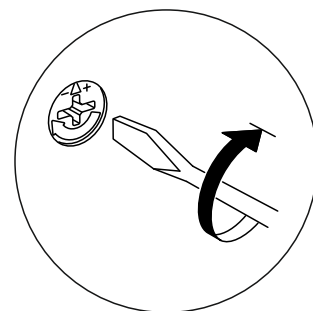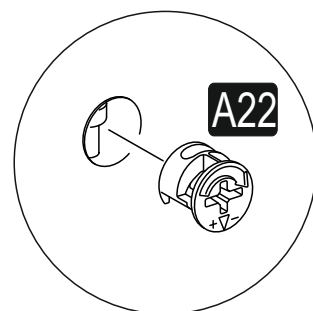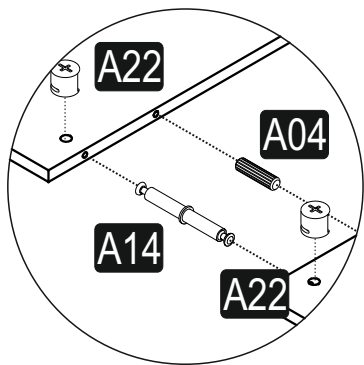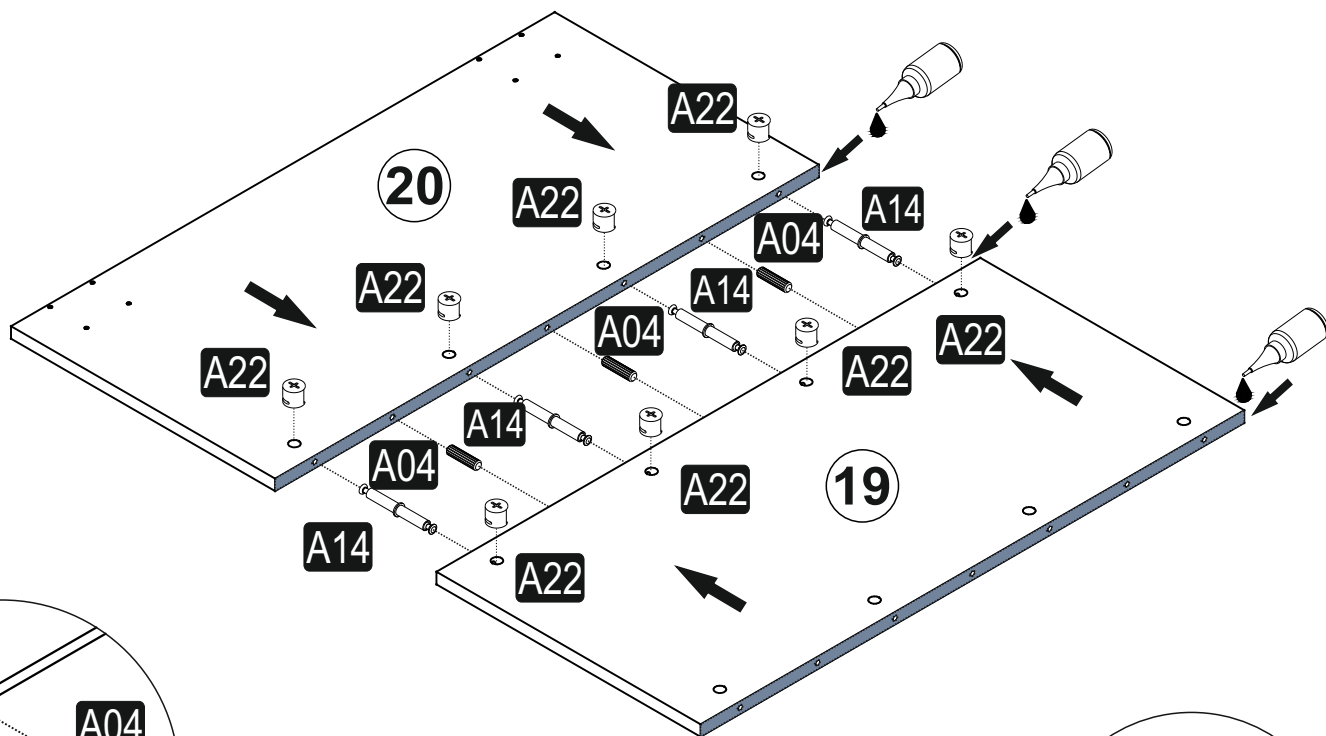


# 14


## 2x

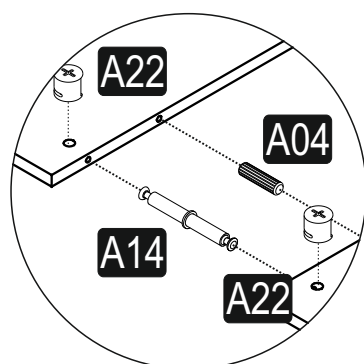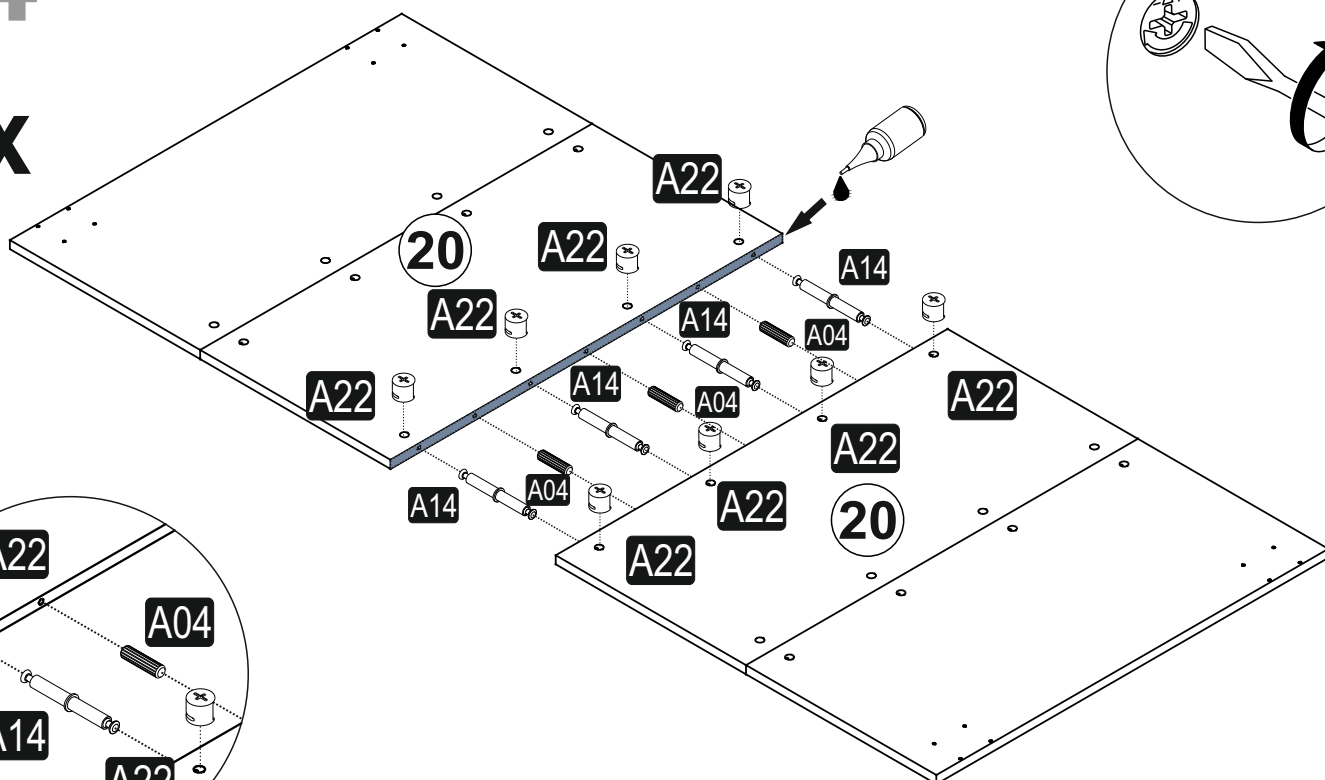


15

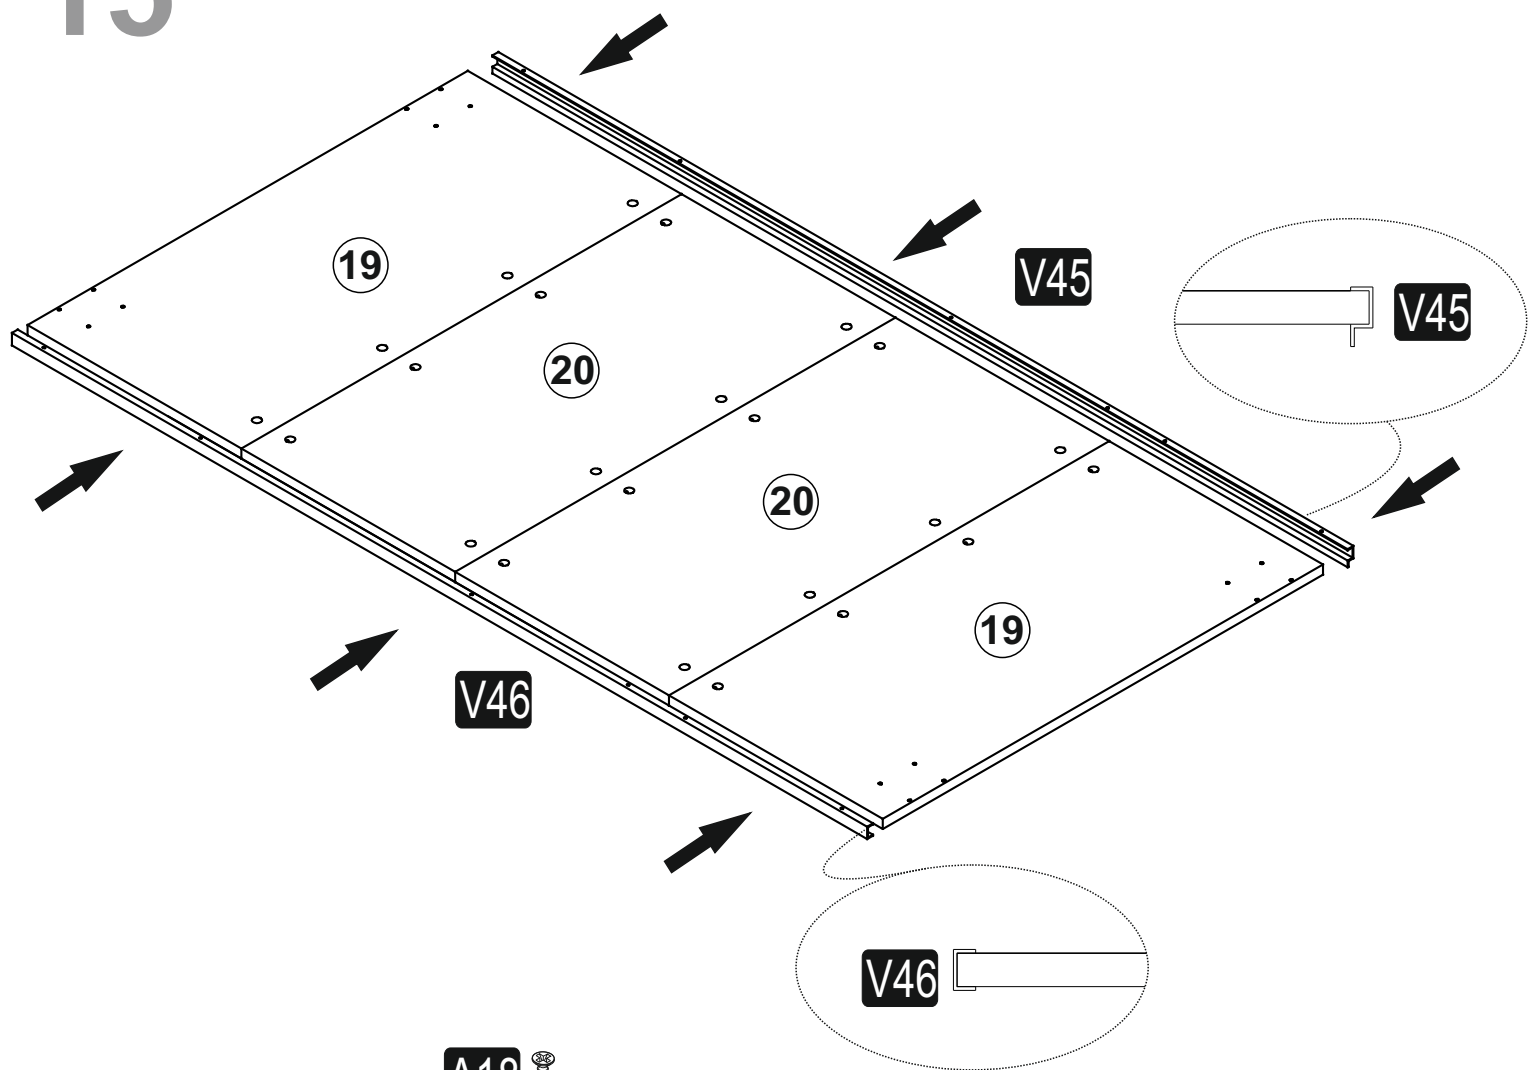


16

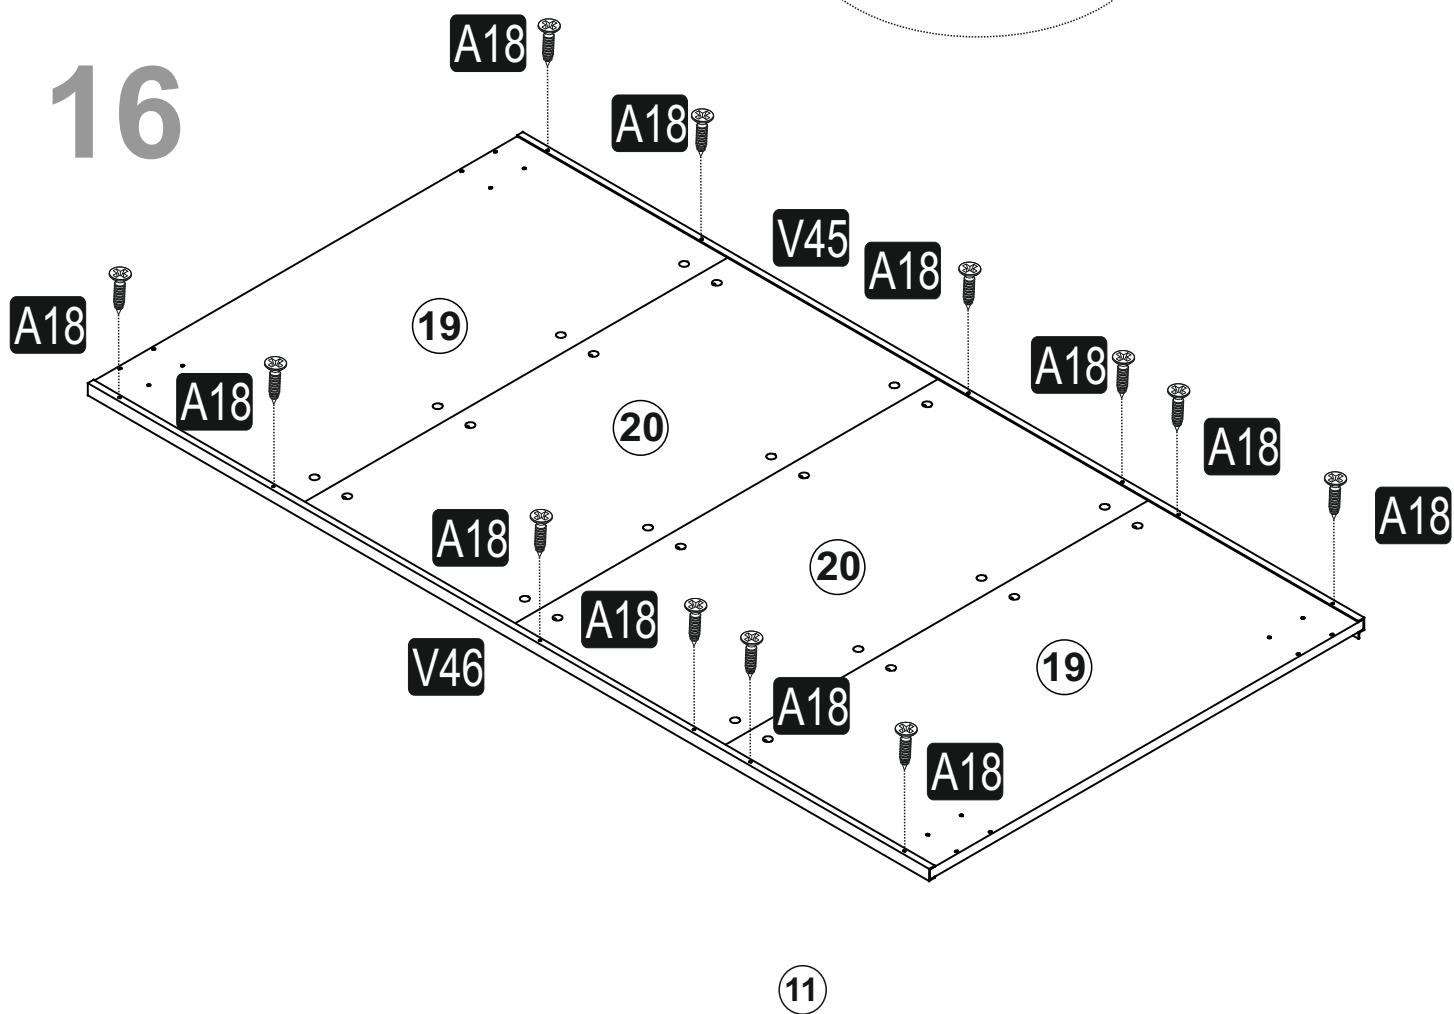




# 17

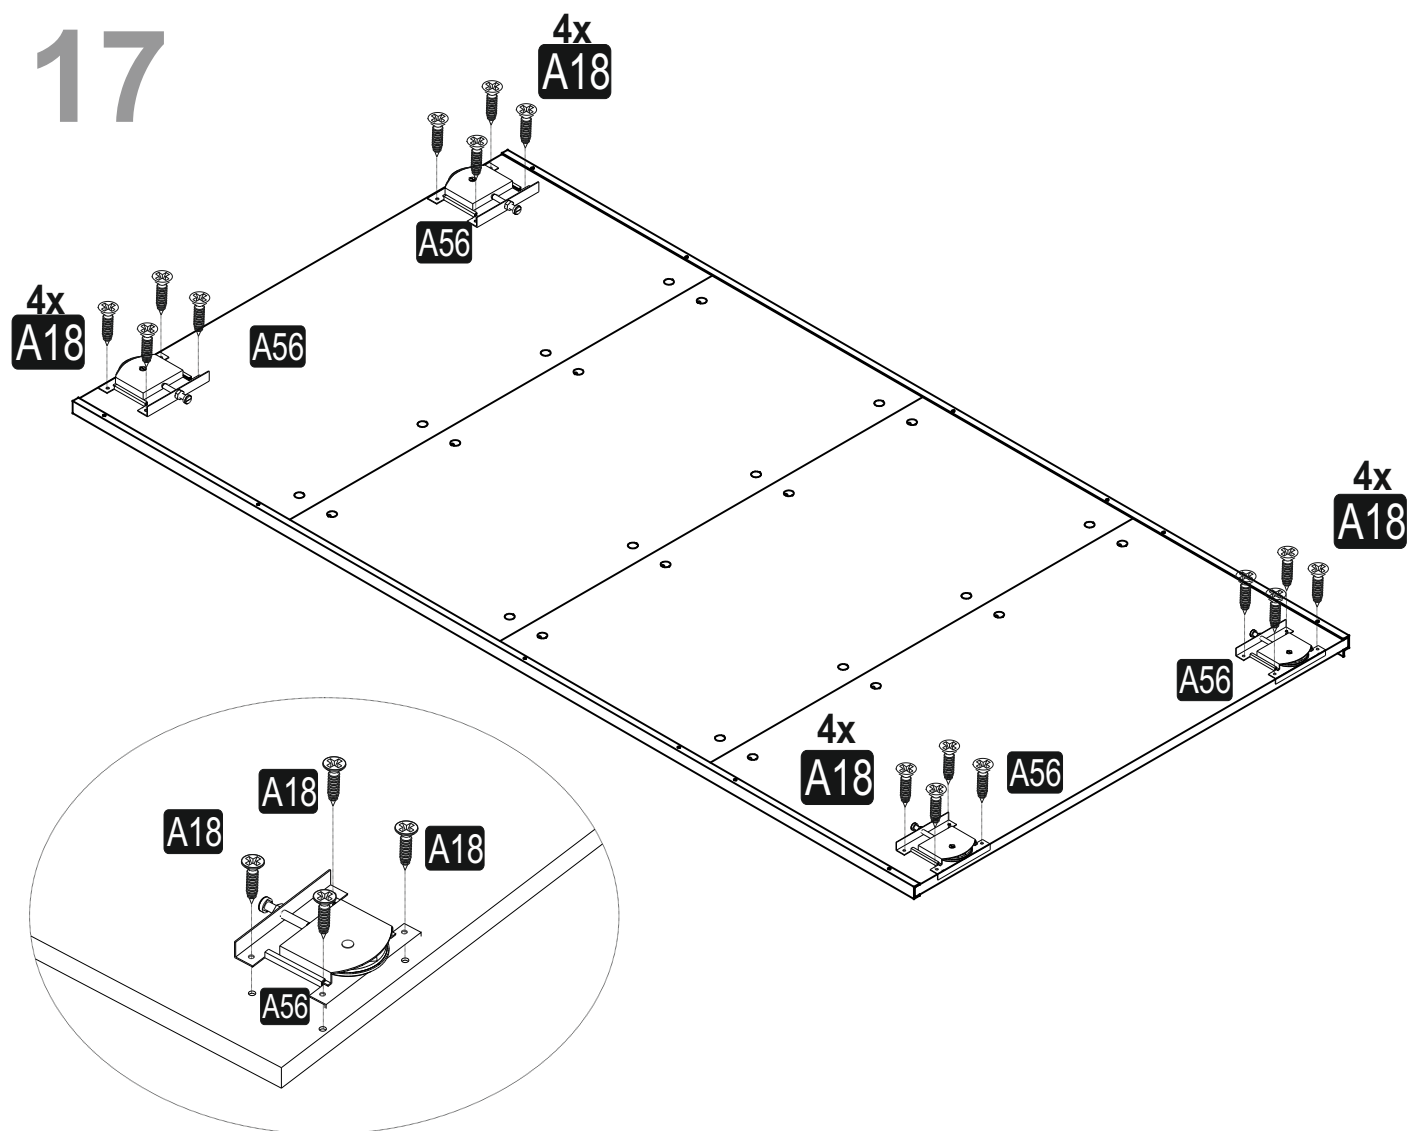




# 18

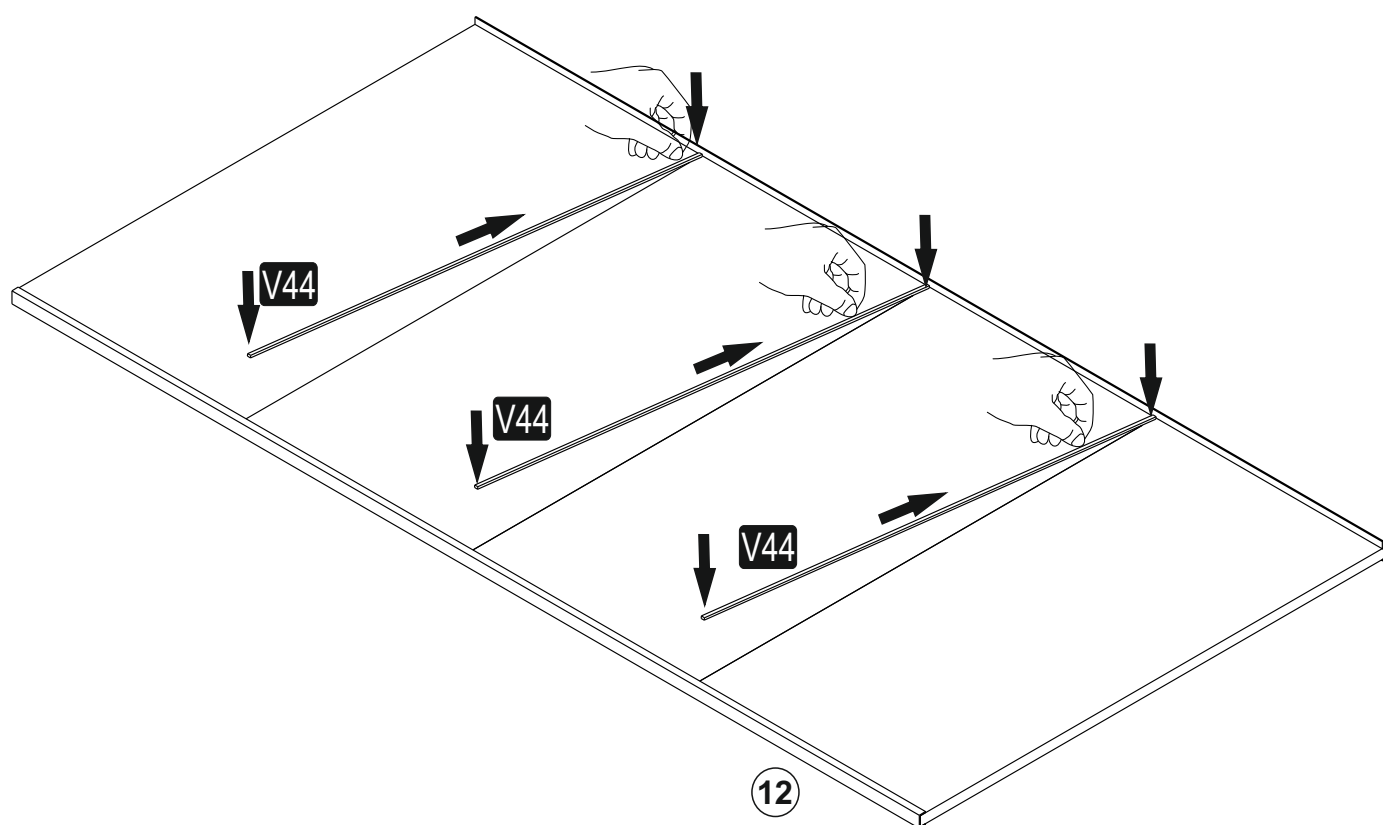

# 19

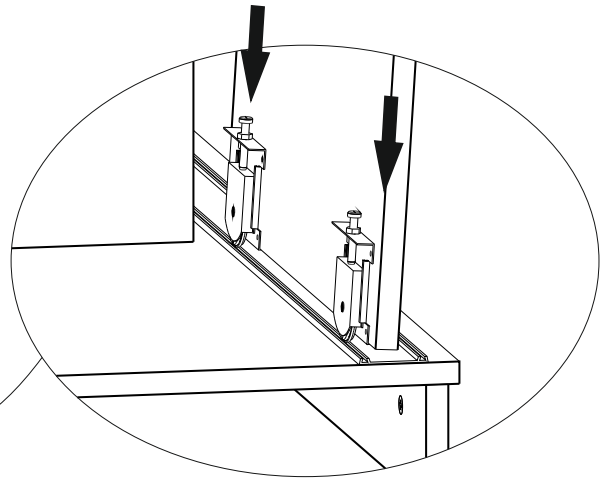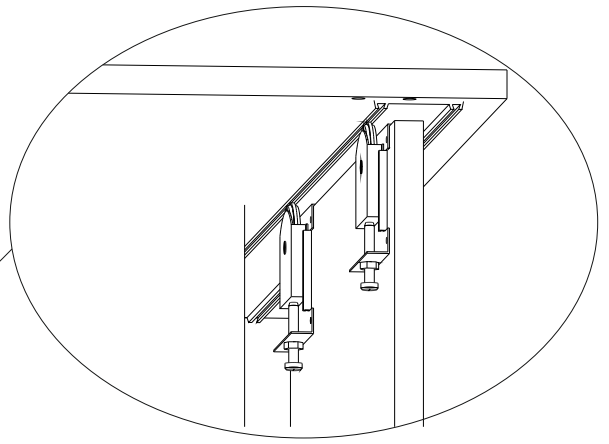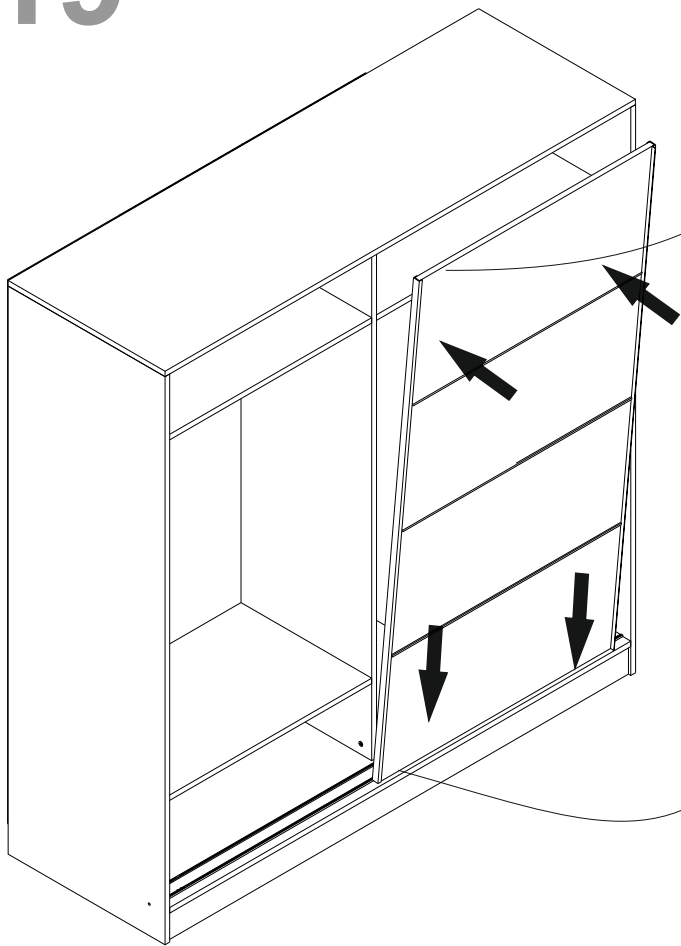


# 20

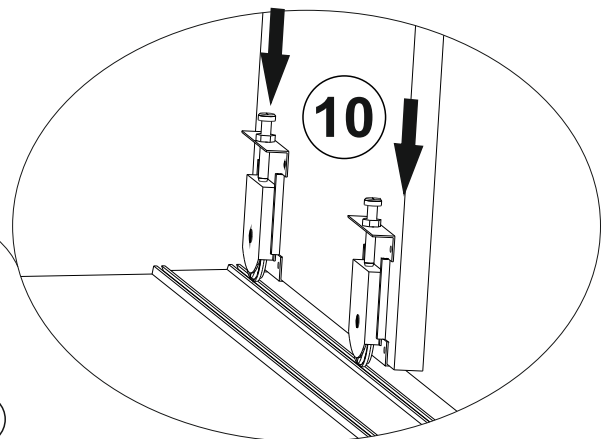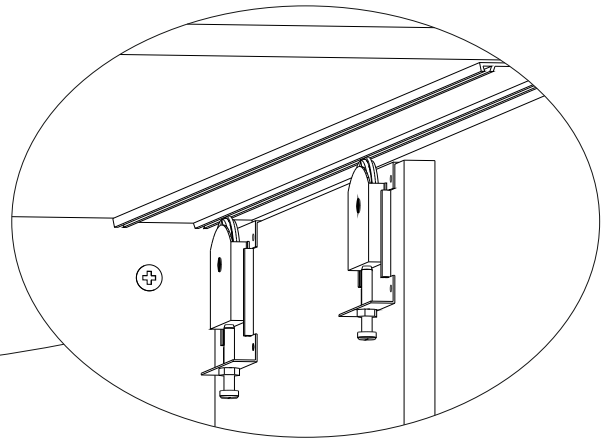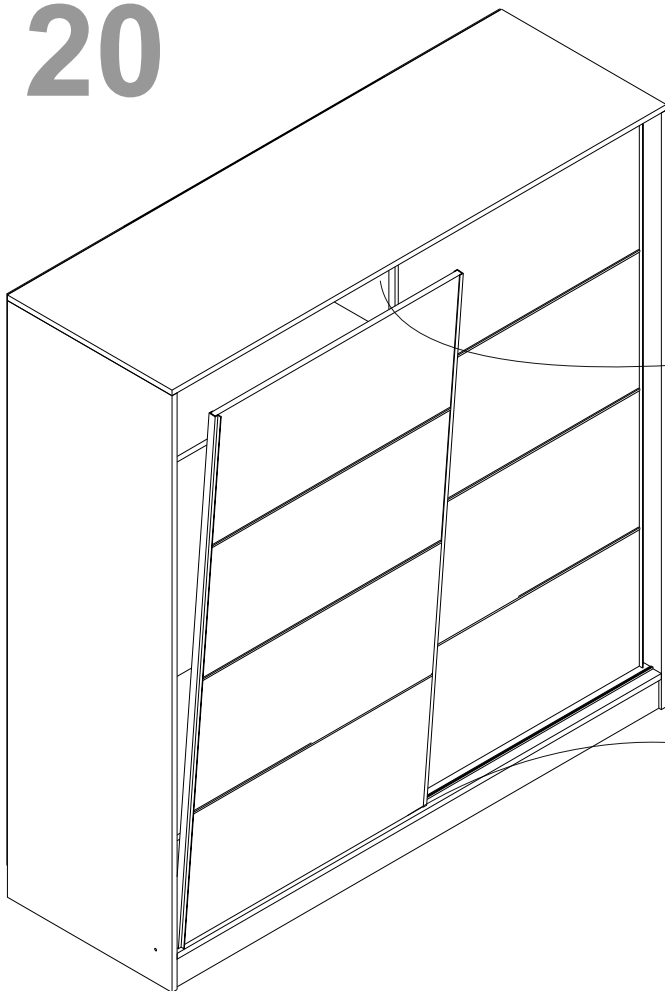


13

# 21

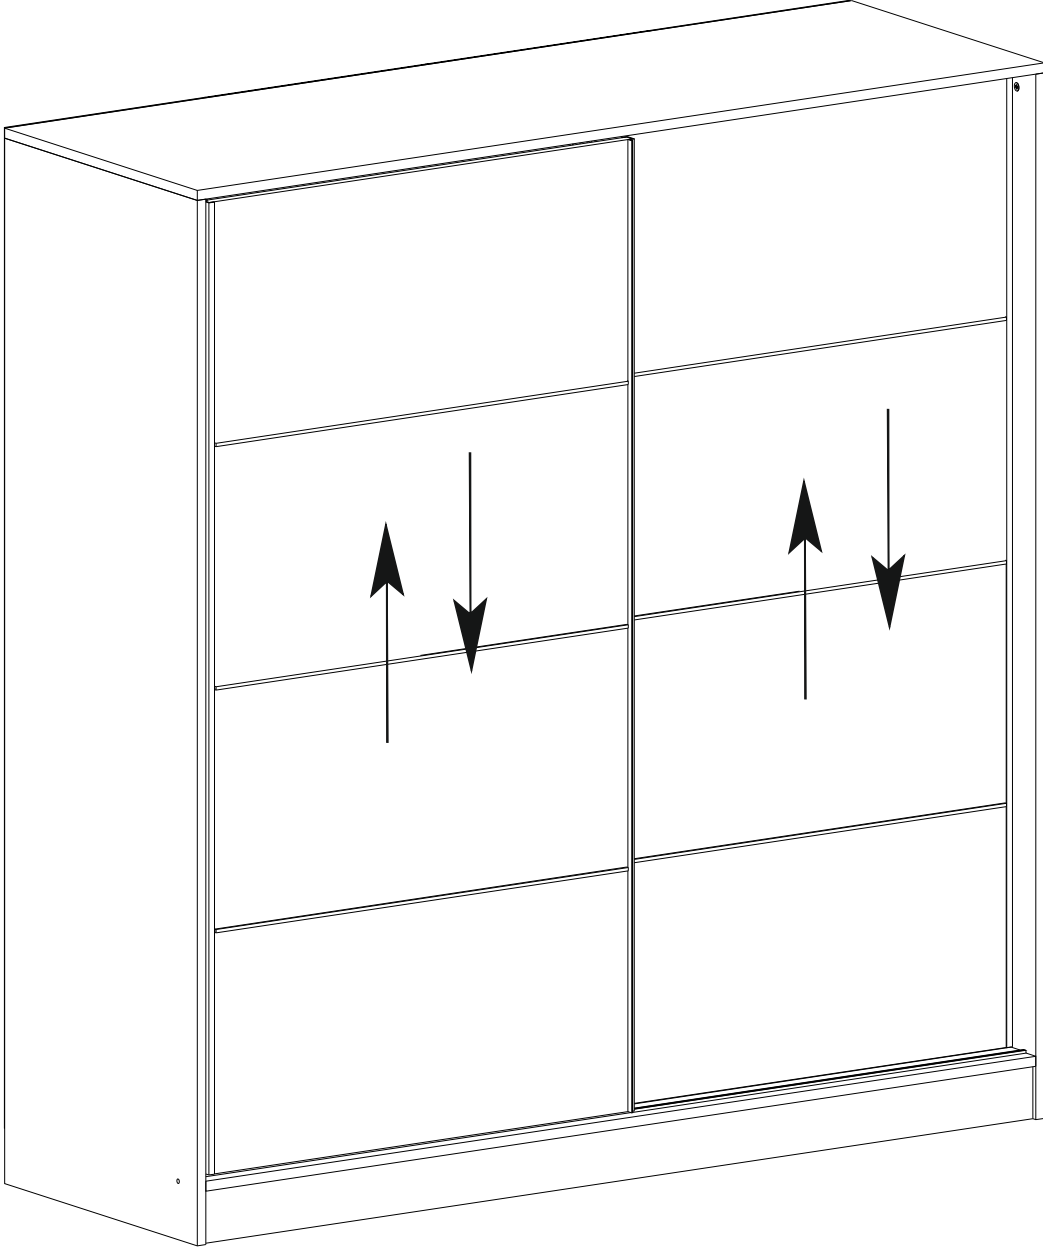

# 22

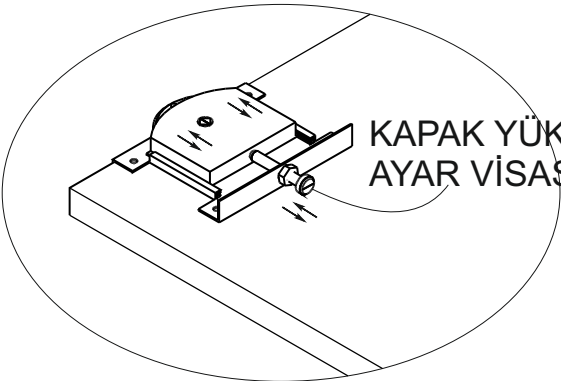

KAPAK YÜKSEKLİĞİ  
AYAR VİSASI

